

WHY CHOOSE FREEDOM GUARD?

The Freedom Guard® plan is designed to meet needs unique to service members and their families. In the event of a covered failure, Freedom Guard® provides assistance to help you get back on the road with minimal inconvenience.

INCLUDED WITH ALL SERVICE PLANS:



DEPLOYMENT EXTENSION

If you are deployed during the term of your Freedom Guard® contract, you are eligible to have the term of the contract extended up to 12 months. See the contract for the specific details regarding the Deployment Extension.



ENHANCED OVERSEAS CLAIM ASSISTANCE

If a permanent change of station ("PCS") requires you to take your vehicle outside the US or Canada, Freedom Guard® provides coverage for repairs made at facilities located on US military bases. Additionally, we will help you locate a repair facility and walk you through the claims process.



SUBSTITUTE TRANSPORTATION

In the event of a covered mechanical breakdown claim, Freedom Guard® provides reimbursement for rental vehicle expenses through dealerships or licensed rental agencies. Reimbursement is limited to \$60 per day, for a maximum of five days while the vehicle is being repaired.



PCS / TRIP INTERRUPTION

Breakdowns don't always happen close to home. Freedom Guard® provides reimbursement for trip interruption expenses incurred in connection with a covered mechanical breakdown occurring more than 100 miles from your home, up to \$175 per day, for a maximum of three days.



ROADSIDE ASSISTANCE

Freedom Guard® provides 24/7 roadside assistance, covering up to \$100 per occurrence. Towing • Jump starts • Flat tire changes (with inflated spare) • Vehicle fluid delivery • Lockout assistance • Concierge service



OPTIONAL TIRE & WHEEL COVERAGE

Tire & Wheel Coverage provides for the repair of tires and wheels damaged by potholes, rocks, nails, tree limbs and other road debris. This coverage can be added to any TriStar Protection Plan® at an additional cost and provides up to \$1,600 in benefits.



NO WAIT COVERAGE

With Freedom Guard® there is no waiting period to file a claim. Coverage begins the day the plan is purchased.

Note that not every benefit listed above is available in every state. Please see your TriStar Protection Plan® agreement for a complete description of all applicable terms, conditions, exclusions and limitations.

TRISTAR

INDEMNITY

OVER 20 YEARS OF SERVICE



PLANS THAT WORK FOR YOU, COVERAGE YOU CAN COUNT ON.

TriStar Freedom Guard® is a vehicle service contract, not an insurance policy. The information provided herein summarizes the features of the Freedom Guard® plan. Consult the actual contract for a full description of all applicable terms, conditions, and exclusions. The protection provided by your plan is not affiliated with or sponsored by any vehicle manufacturer or with the United States Department of Defense.

You are not required to purchase a Freedom Guard® plan in order to purchase, lease or obtain financing for the vehicle. If this product is financed as part of the vehicle's purchase on a retail installment contract, it will be subject to the same Annual Percentage Rate and terms of the purchased vehicle.

A copy of the complete Freedom Guard® service contract and coverage booklet will be provided to you prior to executing a contract to purchase this product.

TriStar Indemnity® owns the following registered service marks: TriStar® and Freedom Guard®. ©2021 TriStar Indemnity. All rights reserved.

Claims: 866.585.9747
Roadside Assistance: 877.834.9534
www.tristarprotection.com

FREEDOM GUARD

BY TRISTAR


PROTECTING THOSE WHO PROTECT US®



FINALLY, A SERVICE CONTRACT FOR ACTIVE MILITARY MEMBERS AND THEIR FAMILY



TODAY'S AVERAGE REPAIR COSTS

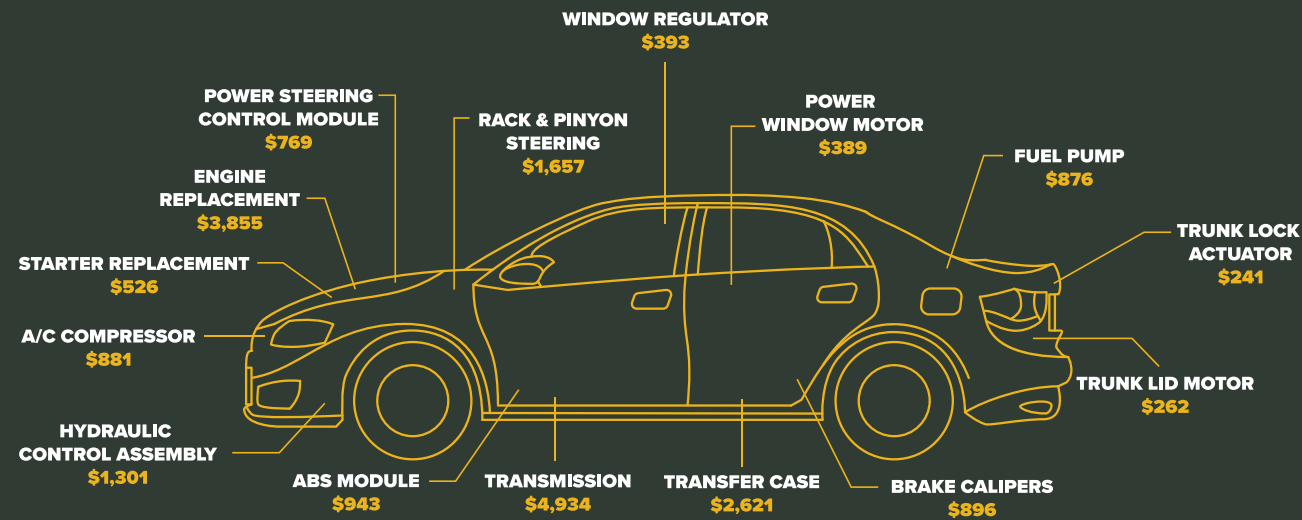

Source: RepairPal

The Freedom Guard® service contract plans provide coverage for those components specifically listed as covered under each plan name. For a complete list of terms, conditions, limitations and exclusions please refer to the complete Freedom Guard® service contract.

CHOOSE THE COVERAGE THAT WORKS FOR YOU!

Freedom Guard® offers you the choice of three (3) distinct coverage levels, based on your driving habits and vehicle needs.

1. POWERTRAIN PLUS PLAN

Protection for your most important vehicle systems and key safety and comfort systems.

ENGINE – All internal lubricated parts, engine block, cylinder heads, manifolds, expansion plugs, harmonic balancer, pulleys and engine mounts, oil pan and rotary engine rotor housing, factory-installed supercharger/ turbocharger housing and internal parts/vanes, timing belt/chain and tensioner, timing chain cover, valve cover(s), water pump, seals and gaskets within component group; cases and housings are covered only if damaged by the failure of an internally lubricated part.

TRANSMISSION – Automatic/standard or transfer case, all internal lubricated parts within the transmission, metal cooler lines, mounts, throttle valve cable, torque converter, flywheel/flexplate, transmission and transfer case housing, transmission cooler, front pump, oil pan, vacuum modulator, external and internal control units, seals and gaskets.

AIR CONDITIONING – Accumulator, blower motor, compressor including clutch and internal parts/pulley assembly, condenser, evaporator, orifice tube, suction control devices, thermostatic expansion valve, high/low compressor cut-off switch, pressure cycling switch, seals and gaskets; A/C lines, idler pulley and bearings, and refrigerant ONLY if needed in conjunction with the repair of a covered component.

BRAKES – Master cylinder, proportioning valve, vacuum assist booster, hydro boost, disc brake caliper, wheel cylinders, compensating valve, brake hydraulic lines and fittings, hydraulic control unit, seals and gaskets; plus the following ABS parts: electronic control processor, wheel speed sensors, hydraulic pump/motor assembly, pressure modulator/isolation dump valves, accumulator, seals and gaskets.

COOLING SYSTEM – Cooling fan motor, blade assembly, clutch and motor, radiator, belt tensioner, heater core, thermostat, heater control valve, seals and gaskets.

ELECTRICAL – Alternator, alternator voltage regulator, backup light switch, distributor, bushings/gear/housing and shaft excluding cap/rotor and spark plug wires, horns, ignition coil, oil pressure sending unit, engine management sensors, main wiring harness and ignition module/ main electronic control unit, powertrain control module, starter motor and solenoid/starter drive; plus the following electrical switches when manually or mechanically operated: brake light switch, defogger switch excluding relay, headlight dimmer switch, headlight switch, ignition switch, power mirror switch, power mirror motor, turn signal switch, washer pump switch, window switches, wiper switch, washer pump motor, front and rear wiper motor.

FRONT SUSPENSION – Ball joints, control arm bearings/bushings and shafts, torsion bars/ mounts and bushings, stabilizer bar/links and bushings, radius arm and bushings, height sensor, mode switch, spindles, wheel bearings, front only struts excluding cartridge inserts, upper pivot bearing mounting assembly, wheel seals, seals and gaskets.

FUEL SYSTEM – Fuel pump and fuel distributor, throttle body, idle speed or automatic idle speed assemblies, warm-up regulator, diesel accessory vacuum and injector pumps, seals and gaskets, plus the following: injector, metal lines, pressure regulator, rail, tank, fuel tank sending unit.

STEERING – All internal lubricated parts within the steering gear and power steering pump, power steering hoses and couplings, intermediate shaft and main shaft, steering gear and pump housing, pitman arm, idler arm, tie rod ends, drag link, tilt wheel mechanism, rack and pinion gear and housing, seals and gaskets.

2. COMPREHENSIVE PLAN

Includes all of the Powertrain Plus Plan components in addition to protection for high-tech luxury and convenience systems. (Factory-installed equipment only). These include:

AUDIO COMPONENTS (Excluding speakers)

AIR CONDITIONING POWER MODULE

A/C CONTROLLER & RELAY

ANTENNA MOTOR & MAST (Power only)

ANTI-THEFT SYSTEM (Switches, relays, sensors & siren)

CONVERTIBLE TOP SWITCH & MOTOR (Engagement)

CRUISE CONTROL (Module, electronic servo/transducer & amplifier)

DOOR LOCK ACTUATORS (Power actuators and solenoids only)

HEAD LAMP DOOR MOTORS (Only)

IGNITION SPARK CONTROL PICKUP SENSOR

INSTRUMENT CLUSTER (Electronic driver information display module/power supply, gauges and speedometer head excluding bulb and CRT display repairs.)

A/C AND HEATING DASH CONTROL UNIT (Temperature control programmer excluding cathode-ray tube display)

KEYLESS ENTRY SYSTEM

LEVEL CONTROL (Electronic only sensors, limiter values and compressor)

POWER SEAT MOTOR & TRANSMISSION

SUNROOF MOTOR

SWITCHES (Electric: heater/AC blower motor switch, cruise control engagement switch, door lock switches, seat switches, sunroof switch, trunk lid release switch.)

TRUNK LID RELEASE ACTIVATOR & MOTOR

POWER WINDOW GEAR, MOTOR, REGULATOR & LIFT TYPE

3. EXCLUSIONARY PLAN

The Exclusionary Plan is designed to cover nearly all parts which experience a mechanical and electrical failure unless the failed part or the cause of failure is specifically excluded from coverage.

Some of these excluded items include:

1. Routine maintenance items including oil, coolant, fluids, refrigerant and others
2. Batteries, bulbs, tires, brake and exhaust components, shocks, struts and other routinely replaced items
3. Metal, ornaments, paint, wheel covers and other exterior appearance items
4. Upholstery, buttons, carpet, handles and other interior items

Please review the TriStar Protection Plan® agreement for a complete list of terms, conditions and parts excluded from coverage under the Exclusionary Plan.